

Install Instructions:


1. Install the Hwy Peg using the 8x80mm bolts. Do not tighten bolts at this point.
2. Bolt lower part of Nerf to the Hwy Peg using the 8x45mm bolts. Do not tighten at this point. See “special note”.
3. The upper left side of the Nerf mounts to the bike using an existing hole through the frame. On the left side this hole is just ahead of the radiator cap. On the right side, the hole might be covered up by the Vin sticker. Mount here using the 6x55mm bolt
4. The right upper side of the Nerf shares the same mount as the upper reservoir mount. Mount the Nerf using the 6x25mm bolt.
5. Check fit and tighten bolts in following order.
 1. Tighten Nerf upper to the Hwy Peg. Do not over tighten. The bolt only needs a few threads into the nylon on the nylock nut to be adequate.
 2. Tighten the top mount points on the Nerf upper. Note the left side upper will pass right over the radiator cap. This is normal. Any fluid that needs to be added to the cooling system is added to the reservoir on the right side, *not* through the radiator cap.

Hardware List:

2-8x80mm bolts
4-8mm nylock nuts
2-8x45mm bolts
3-1/4” washers
1-6x25mm bolt
1-6x55mm bolt
1-6mm nylock nut
2-5/16 this washers (to be used as spacers if needed)

SPECIAL NOTE:

Use the supplied 5/16 washers as a spacer between the lower mounting tabs on the Nerf upper and the mounting point on the hwy peg. Generally only one washer is needed in the front position.

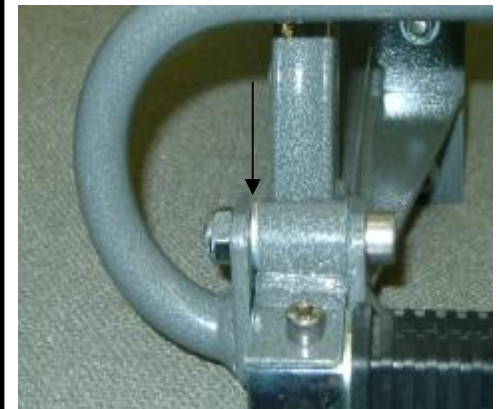

Happy Trails Products
PD Nerf Install Instructions
800-444-8770
www.happy-trail.com