



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

08-Later* Kawasaki KLR-650 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see *figure 1*).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the right side of the motorcycle and the pressure valve is facing rearward. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 8.13" or shock damage may occur.

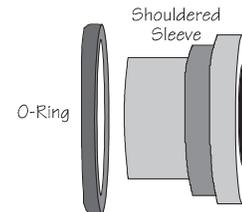


figure 1

*This instruction is appropriate for the models noted; however you must confirm you have the correct kit part number for your specific bike by contacting Progressive Suspension

<http://www.progressivesuspension.com>



6911 Marlin Circle, La Palma, CA 90623
(714) 523-8700, Fax (714) 523-3220

08-Later* Kawasaki KLR-650 465 Series Single Shock Supplement

Please read these instructions completely before starting!

1. Shouldered sleeves with O-rings should already be installed in the shock eye. If not, insert sleeves with O-rings in the top eye (see *figure 1*).
2. Mount the shock, referencing your authorized shop manual, noting the following important details: Make sure the rebound adjustment is at the bottom, facing the right side of the motorcycle and the pressure valve is facing rearward. Tighten shock bolts to the proper torque specifications (refer to your manual).

Caution: The installed spring length must never be set shorter than 8.13" or shock damage may occur.

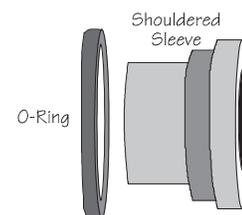


figure 1

*This instruction is appropriate for the models noted; however you must confirm you have the correct kit part number for your specific bike by contacting Progressive Suspension

<http://www.progressivesuspension.com>