



HAPPY-TRAIL.COM
Dual Sport & Adventure Touring Specialists

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail support@happy-trail.com.

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list at the end of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

Step 1

Set the hardware from the kit along with the Hwy Peg Bar on a flat surface.

You will need a 19mm open end wrench and 8mm Hex (Allen) wrench to install the pegs on the bar.

Fig 1




Step 2

Place the foot peg on the Hwy Bar such that the notch in the tab at the end of the bar matches up with the tab at the end of the foot peg.

Insert the M12x25 bolt through the foot peg and hwy bar tab and secure on with the M12 nut as shown in Fig 2. Repeat for other side.

Torque bolt to 33 ft/lbs.

Fig 2

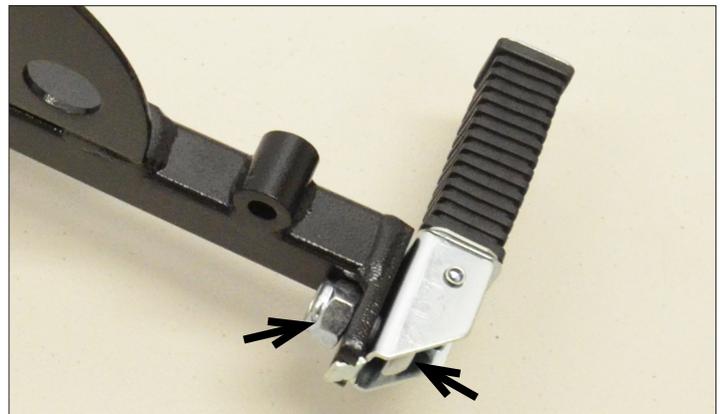


Proceed to next page if only installing Highway Pegs on bike. If installing with our Nerf bars, use the Nerf bar installation instructions from this point.

Step 3

Remove the front engine mount triangles securing the engine to the frame. (see Fig 3) These triangles will not be re-used.

Note the 2008+ OEM skid plate is not compatible with these Hwy Pegs and will also have to be removed and replaced with an aftermarket unit such as the Happy Trails Skid Plate (PN: HTP4-1-88.)

Fig 3

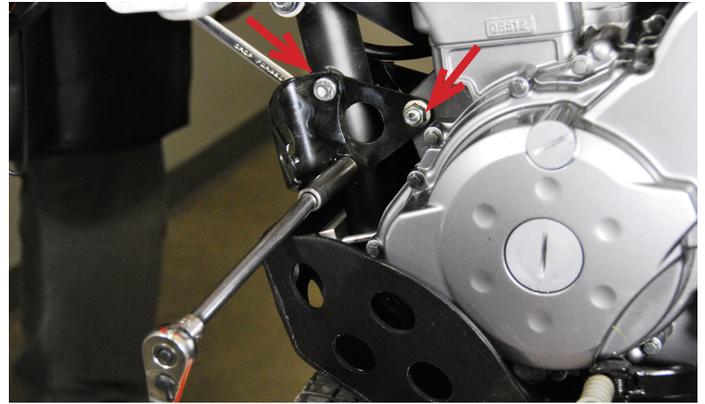



Step 4

Install the highway peg in the location of the factory engine mounts using the original bolts and nuts. (See Fig 4)

Note we recommend the use of thread locking compound at these engine mount locations.

Torque the 10mm bolt to 24 ft/lbs, and the 8mm bolts to 18 ft/lbs.

Fig 4

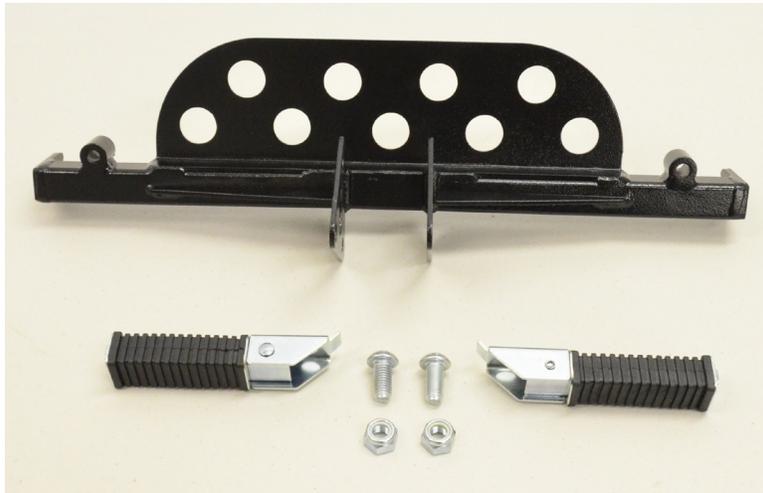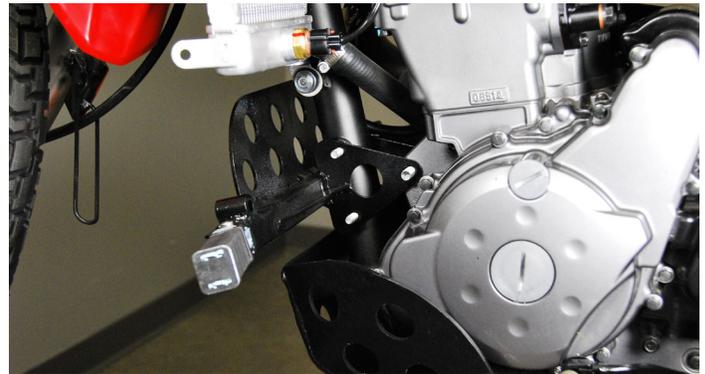

Recommended Tools:

8mm Allen (hex) Wrench
19mm Wrench

8,12 & 14mm sockets
10, 12 & 14 Wrench
Thread locking compound
Torque wrench



Hardware List:

- (1) EG4 Hwy Peg Bar
- (2) M12x25 BHCS Bolts
- (2) M12 Nylock Nut
- (2) Foot Peg with bracket

2/12/15
Rev. 1
JE